

# HELI

## LPG PNEUMATIC TIRE FORKLIFT

- GM ENGINE
- IMPCO LPG CONVERTER
- CLOSED-LOOP ELECTRONIC EMISSION CONTROL SYSTEM
- DIAGNOSTIC MEMORY
- MALFUNCTION DASH DISPLAY
- EPA CERTIFIED



4,000~7,000 Lbs

CPYD20  
CPYD25  
CPYD30  
CPYD35



[www.HeliForkliftUSA.com](http://www.HeliForkliftUSA.com)

MANUFACTURER: **ANHUI HELI CO., LTD.**



DISTRIBUTOR: SOUTHWEST EQUIPMENT SALES • 4105 GLOBEVILLE ROAD, DENVER, CO 80216

TEL: 888-NEW-HELI (639-4354) • FAX: 303-468-9901



## SPECIFICATIONS

Manufacturer		HELI			
Model		CPYD20	CPYD25	CPYD30	CPYD35
Load Capacity	lbs	4,000	5,000	6,000	7,000
Load Center	in	24	24	24	24
Lifting Speed (Without/With load)	tpm	118/108	118/108	92/88	73/65
Max. Travel Speed	mph	11.8	11.8	11.8	11.8
Overall Height Forks Raised	A in	158.7	158.7	167.3	167.3
Max. Fork Height	B in	118	118	118	118
Overall Height Upright Lowered	C in	78.5	78.5	81.5	85.8
Free Lift	E in	6.1	6.1	6.3	12
Overall Length (With Forks)	H in	139.8	142.5	147.4	148.2
Overall Length (Without Forks)	I in	97.6	100.4	105.3	106.1
Min. Ground Clearance	G in	4.3	4.3	5.5	5.3
Overhang (Front/Rear)	K/M in	17.7/17	17.7/19.7	18.7/19.7	19.5/19.7
Wheel Base	L in	63	63	67	67
Overall Height (With Overhead Guard)	P in	81.5	81.5	82.3	82.3
Overall Width	Q in	45.3	45.3	48.2	48.2
Opening Of Forks	R in	9.6-40.2	9.6-40.2	9.8-41.7	9.8-41.7
Tread (Front/Rear)	S/T in	38.2/38.2	38.2/38.2	39.4/38.2	39.4/38.2
Min. Turning Radius (Outside)	W in	85.4	88.2	94.5	95.3
Min. Intersecting Aisle	X in	75.6	79.1	83.1	83.1
Fork Size	J/U/F in	36.2/4.8/1.57		42.1/4.92/1.77	42.1/5.9/1.97
Max. Drawbar Pull (Without/With Load)	lbs	1,874/3,667	1,998/3,667	2,205/3,487	2,250/3,487
Tilt Angle (F/B)	deg	6° -12°			
Max. Gradeability (With Load)	%	≥ 20			
Engine Model		GM 3.0 (LPG)			
Compression Ratio		8.2:1			
Rated Horsepower	hp/rpm	61.5/2800			
Rated Torque	lb ft/rpm	141/1400-1600			
Battery Voltage /Capacity	V/Ah	12/60			
Tires (Front)		7.00-12-12PR	28X9-15-12PR	28X9-15 solid pneumatic tires	
Tires (Rear)		6.00-9-10PR	6.50-10-10PR		
Total Weight	lbs	7,510	8,300	9,620	10,790

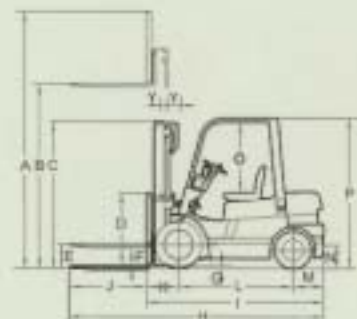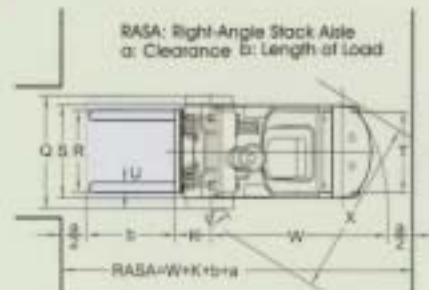

### For Your Safety

Before operating a lift truck, an operator must:

- \*Be trained and authorized
- \*Read and understand the operator's manual
- \*Not operate a faulty lift truck
- \*Not repair a lift truck unless trained and authorized
- \*Have the overhead guard and load backrest extension in place

### During operation, a lift truck operator must:

- \*Wear a seat belt
- \*Keep entire body inside truck cab
- \*Never carry passengers or lift people
- \*Keep truck away from people and obstructions
- \*Travel with lift mechanism as low as possible and tilted back

### To park a lift truck, an operator must:

- \*Completely lower forks or attachments
- \*Shift into neutral
- \*Turn key off
- \*Set parking brake



CE Certification



ISO9001 Certification



**Southwest  
Equipment  
Sales**

HELI DISTRIBUTOR FOR WESTERN USA